



PAT-TRAP, Inc.

Choice of the ATA

632 Western Avenue • Henniker, New Hampshire 03242 • Tel. (603) 428-3396 • Fax (603) 428-7340


TARGET BRUSH MAINTENANCE

NEVER STAND IN FRONT OF A TRAP MACHINE. THE TRAP MACHINE MUST BE TURNED OFF AND THE SPRING RELEASED BEFORE ENTERING THE TRAP HOUSE. NEVER ATTEMPT TO MAKE ANY ADJUSTMENT WHILE THE THROW ARM IS COCKED.

When Targets start to break or Targets are being thrown further to the right, it may be time to change the target brush. When the target brush becomes worn out, the target can be bumped ahead and/or “slide down” the throw plate. This can cause either the target to break or be thrown further to the right.

The purpose of the target brush is to hold the target against the throw arm when the throw arm advances to the cocked position.

When the brush begins to “flair out”, loosen the screw and turn the brush 180 degrees. The brush needs to be aligned with the narrow side of the brush running from front to back of the Pat-Trap[®] Machine as shown in Diagram 36 below. Replace the Target Brush when needed.

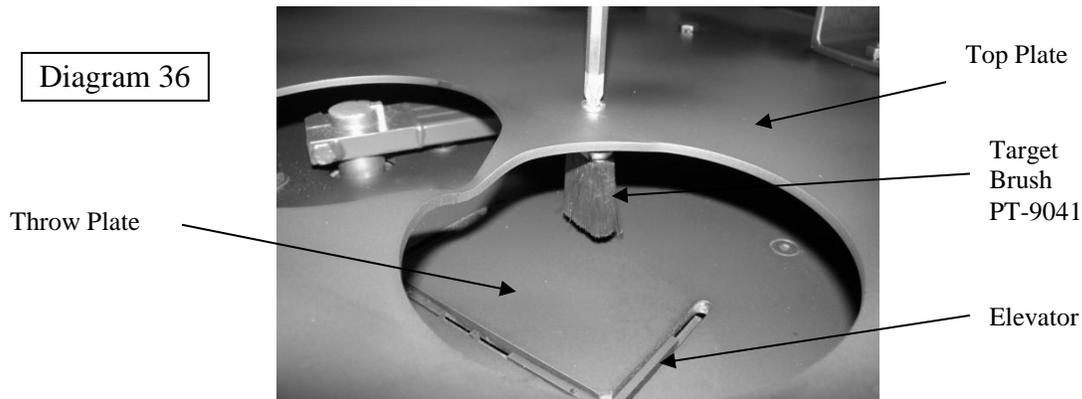

Installation of New Target Brush

The turret does not have to be removed to replace the target brush. Just remove the targets and use a phillips screw driver to remove the brush.